


STEP 1 Where to fit Adaptor? For quick-fit video visit: www.euroilites.info

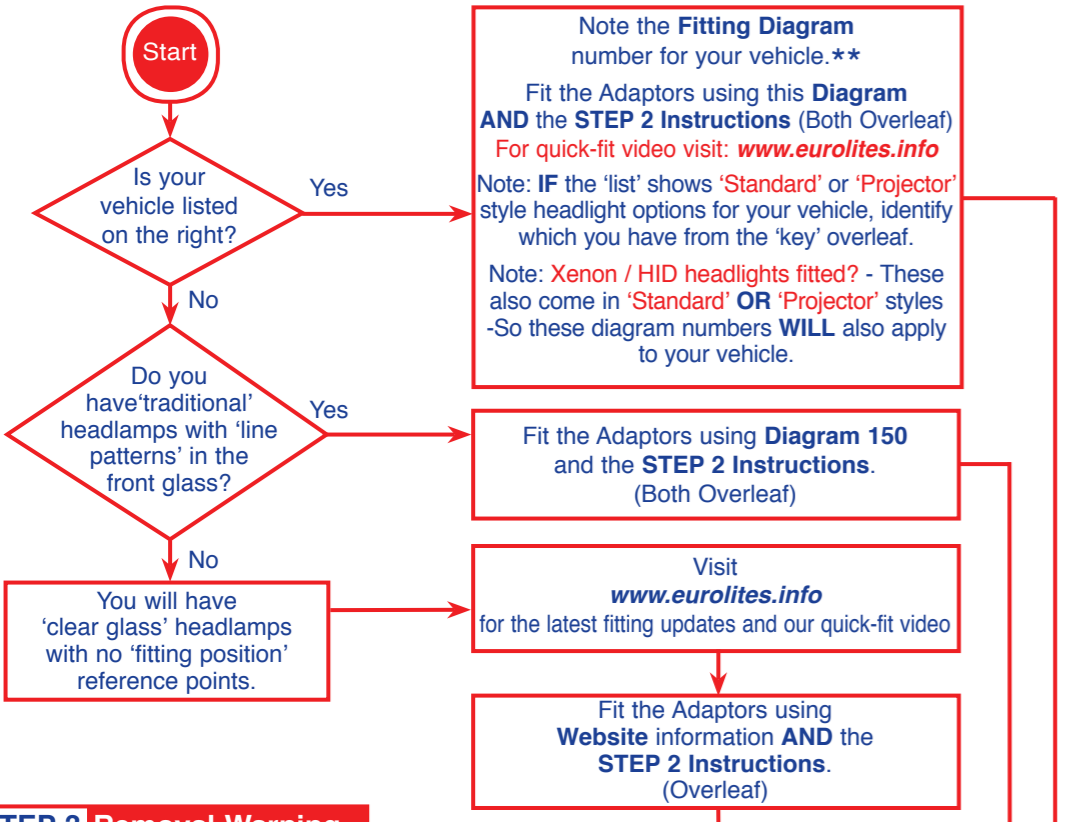

STEP 3 Removal Warning

- 1. Always remove your adaptors immediately upon returning to mainland Europe.
2. Switch on headlights to soften the adhesive before removal.
3. When removing the adaptors please ensure the ultra-thin adhesive 'carrier film' has also been peeled from the headlamp.
4. Residual Adhesive - Any residual adhesive can be removed using plenty of hot soapy water or an alcohol based cleaner (e.g. Methylated Spirits or Neat Windscreen Wash).
5. DO NOT USE WHITE SPIRIT, THINNERS OR ACETONE BASED CLEANERS.
6. NOTE: Take care not to scratch or damage plastic headlamps where fitted.

Table listing MAKE AND MODEL, DIAGRAM, and corresponding fitting instructions for various vehicles under Step 1.

Table listing MAKE AND MODEL, DIAGRAM, and corresponding fitting instructions for various vehicles under Step 2.

Table listing MAKE AND MODEL, DIAGRAM, and corresponding fitting instructions for various vehicles under Step 3.

Table listing MAKE AND MODEL, DIAGRAM, and corresponding fitting instructions for various vehicles under Step 4.

Table listing MAKE AND MODEL, DIAGRAM, and corresponding fitting instructions for various vehicles under Step 5.

\*\*Vehicle Dates are provided by the vehicle manufacturers. TravelSpot can accept no responsibility for their accuracy.